
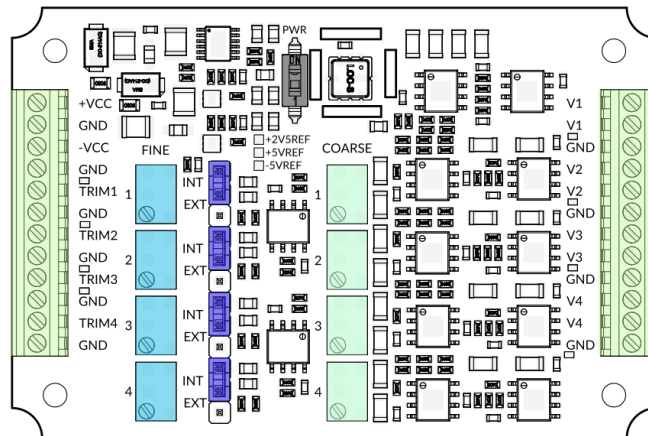


VREF100 - User Guide

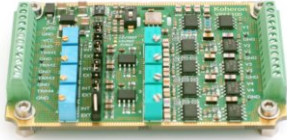

Quick start

1. Supply the board with +9 V on +VCC and -9 V on -VCC
2. Turn on the PWR switch
3. Adjust the voltage with the COARSE trimmer

Fine adjustment

For each channel, the output voltage can be trimmed at ± 50 mV. Adjustment can be done internally with the FINE trimmer or externally by applying a voltage between -5 V and +5 V on the TRIM input of the screw terminal. A jumper allows to choose between the two modes of operation (INT or EXT).